
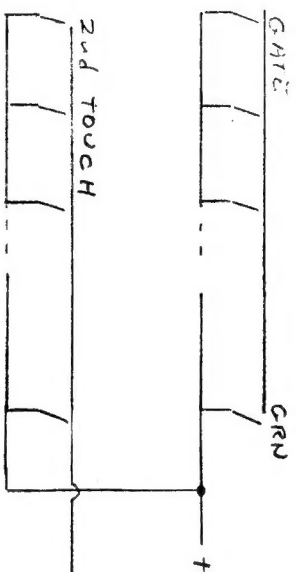






FOR PRESET OPTION:

1. CUT JUMPER
2. PLUG IN 4 4016/4016
3. PLUG IN PRESET CABLE

← OFF ON →

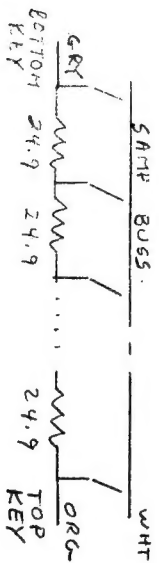

KEYBOARD

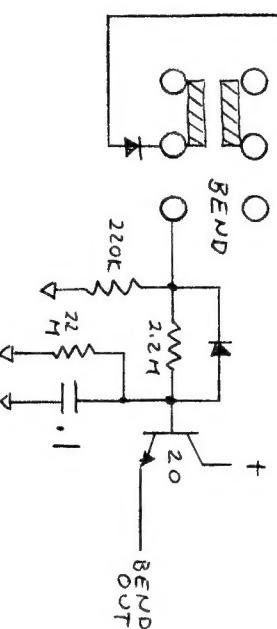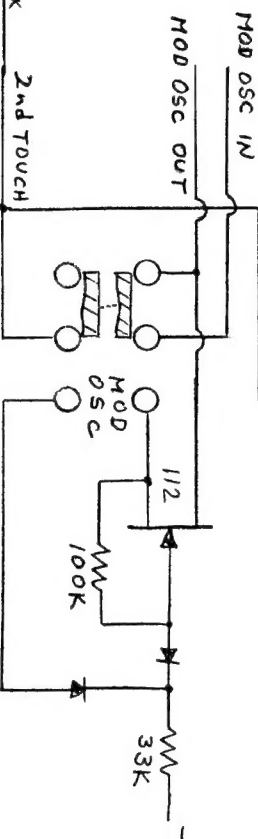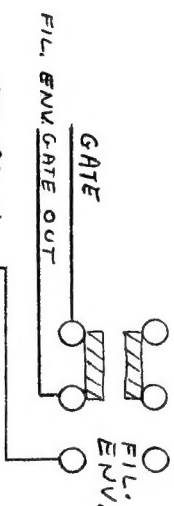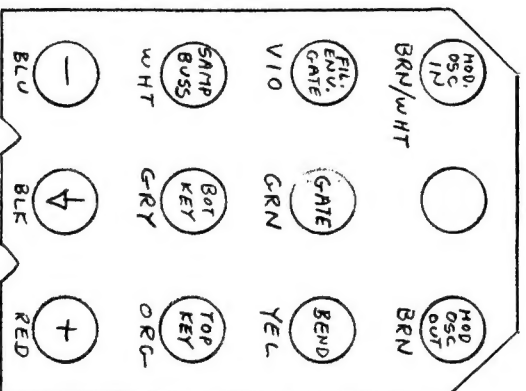




SECOND TOUCH CIRCUIT

ELECTRONIC MUSIC LABS., INC.
VERNON, CT. 06066

SYN-KEY KEYBOARD WIRING


JJM 11-24-75

SYN-KEY / POLY-BOX INTERFACE.

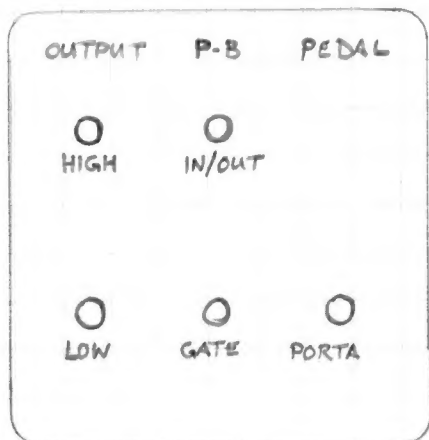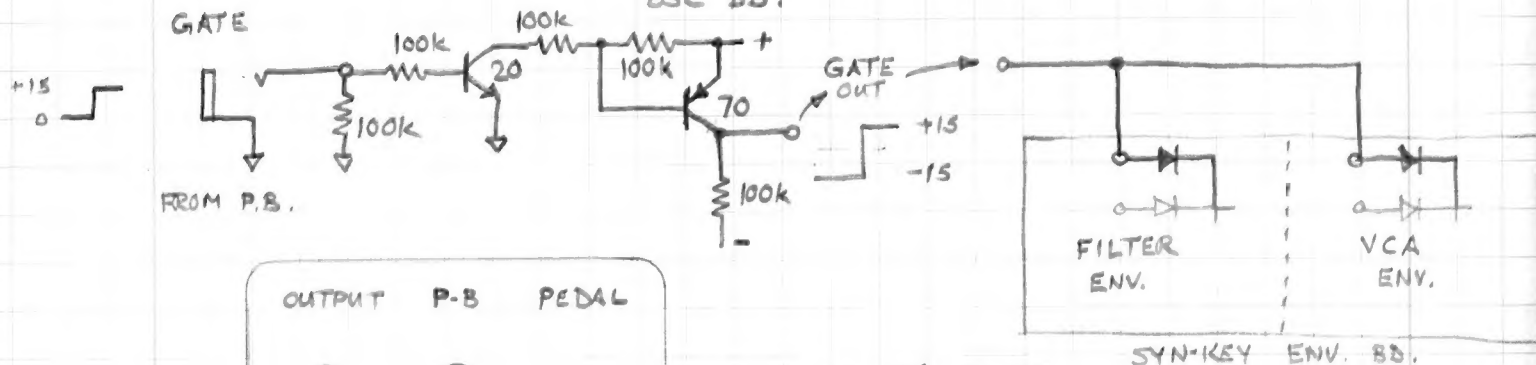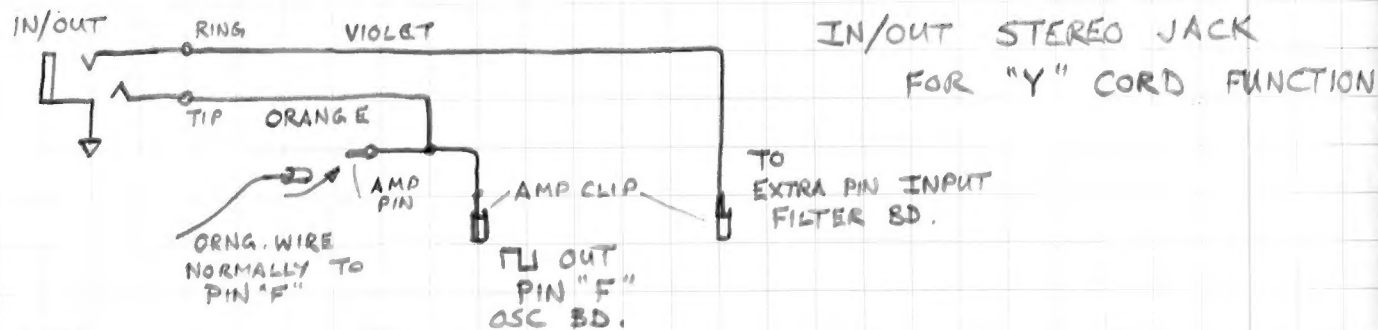


LOCATION OF JACKS
ON SYNKEY BACK
PANEL

MIC-AMP MOD TO SYN-KEY

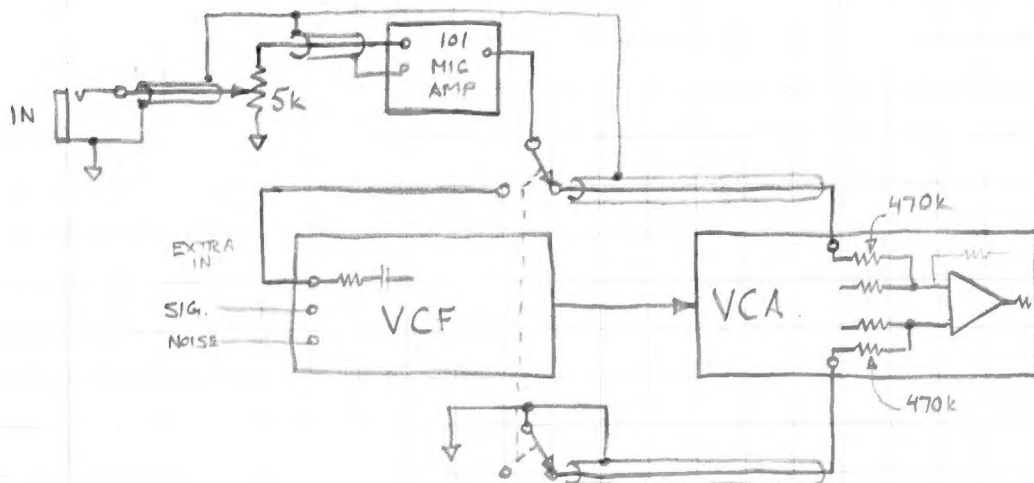


EM L SYNKEY


TRIMPOT CALLOUT

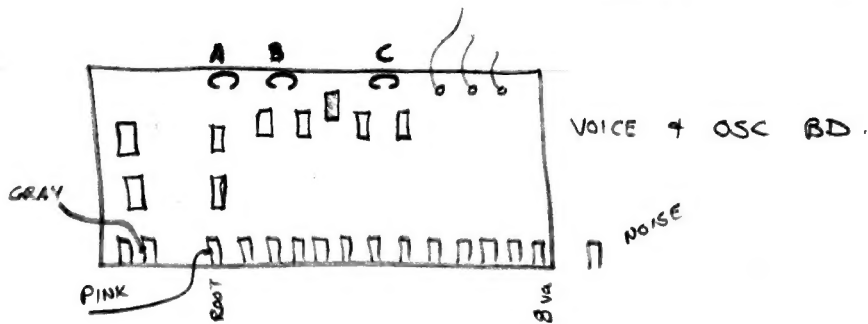


- A - 4.5 mSec/TU
- B - OSC. LINEARITY
- C - PULSE WIDTH

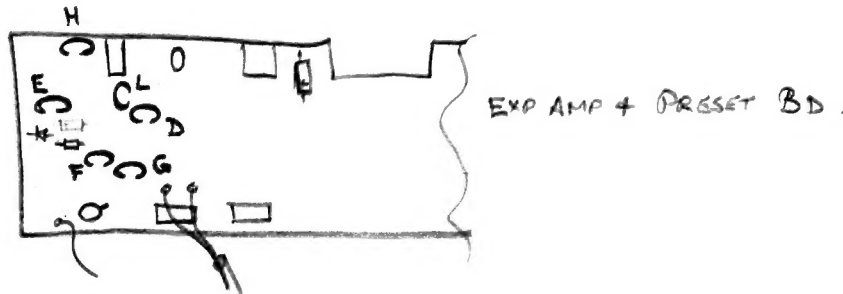

- D - LOW KEY (FILTER)
- E - E_{ref}
- F - ~~INTERACTION~~ NULL
- G - SCALE (FILTER)
- H - SCALE 1046 (OSC)
- L - LOW 87 (OSC)

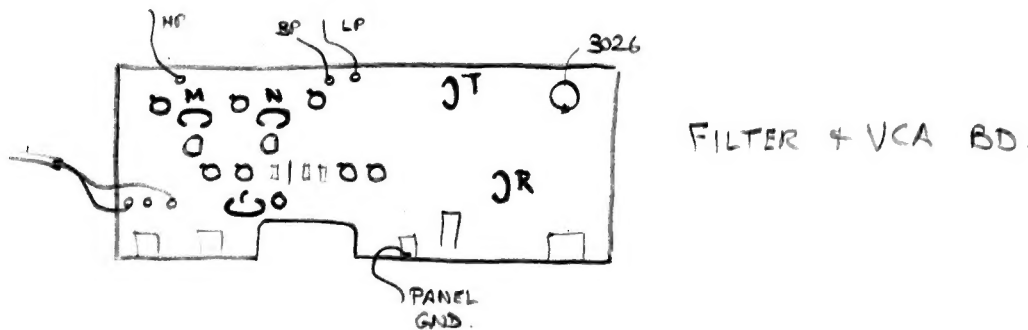

- M - } 1/2 FILTER AC NULL
- N - } 1/2 FILTER AC NULL
- O - FILTER OFFSET
- R - RING MOD.
- T - VCA THUMP NULL

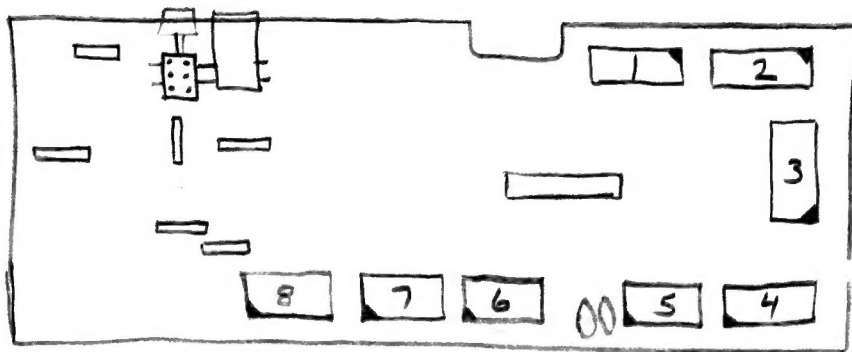

4051 KEY

- 1, FILT. CONTROL-VIB.
- 2, Osc. Vib.
- 3, Mod. Osc. SHAPE
- 4, FILT.-LP, BP, HP
- 5, FILT - Q
- 6, WAVESHAPE
- 7, FILT CONTROL-ENV.
- 8, FILT TUNE

PORTA

ROOT
SHAPE

1

2

CARD READER

PLUG

3

ALL IC's
4051726
O

8

7

6

5

4

SYN•KEY

EXP. AMP 4 PRESET BD.

- 1 FILT. VIB. CONT.
- 2 OSC. VIB.
- 3 MOD. OSC. SHAPE
- 4 FILTER MODE


- 5 FILTER Q
- 6 WAVESHAPE
- 7 FILT. ENV. CONT.
- 8 FILTER TUNE



SYNKEY

CHECKOUT PROCEDURE

1. INSTALL CMOS BUGS

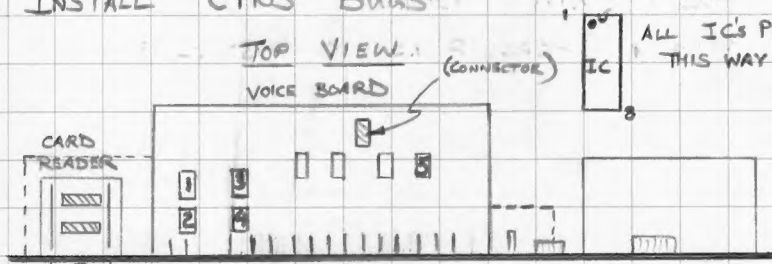

C-MOS

1. 2. 4013

3. 5832 N

4. 5833 N

5. 4016 OR JUMP PIN 8-9

BOTTOM VIEW



ALL C-MOS

(14.) 4051

2. CLIP SCOPE PROBE TO SAMPLED VOLTAGE (CAP) — PLUG KEYBOARD

3. POWER ON

A. CHECK FOR VOLTAGE TRACK W/KEYBOARD

B. CHECK FOR MOD OSC. LED FLASH (RATE)

4. CHECK P.S. +15 & -15 VOLTS & NO (mV) RIPPLE OR NOISE — ALSO $\pm 7.5V$ ZENERS5. CONNECT DVM TO 82K Ω RESISTOR — SET Eref. TO 4.40 VOLTS. — BLUE POT E

6. SET BLUE POT F. FULL CCW. (FILTER INTERACTION NULL)

7. CONNECT DVM TO GRAY LEAD ON +1 OCTAVE SW., LOOK AT \square ROOT SWITCH (PINK)WITH SCOPE ON 1 mSec/div. — SET BLUE POT A FOR 4 $\frac{1}{2}$ div. \square CYCLE. (4.5 mSec/ \square) WITH DVM @ 1.00 VOLTS.

8. SET TUNE AND INTERVAL CONTROLS CENTRAL. (BACK PANEL)

A. MAKE SURE BLUE POT B (LINEARITY) IS CENTRAL.

9. WITH SCOPE ON X-Y DISPLAY AGAINST STD. (87/1046) & ROOT @ \square

A. TUNE BLUE POT L (LOW 87) W/ LOW F KEY DOWN; } FOR STANDSTILL LISSAJOUS

B. TUNE BLUE POT H (HI C) W/ UPPER C KEY DOWN; }

10. CHECK FOR OSC. LINEARITY — LOOK AT MIDDLE F KEYS

A. SET BLUE POT B TO INCREASE ERROR (ROLL RATE OF PATTERN)

B. USE BACK PANEL TUNE & INT. TO STANDSTILL 87/1046

C. REPEAT A & B. UNTIL MIDDLE F's & C's ARE STANDSTILL OR VERY SLOW ROLL. — OSC IS NOW LINEAR

D. REPEAT 8. & 9. TO CENTER REAR PANEL KNOBS

11. SET ROOT TO PULSE WIDTH (FULL CCW) AND FILTER SUSTAIN FULL CW. & +1 OCTAVE

A. HIT KEY AND CHECK P.W. MOD.

B. ADJUST BLUE POT C FOR KEY UP \square 50% AND KEY DOWN \square 5-10%


(WORST CASE)

SYNKEY FILTER AND VCA.

1. SET TUNE JUST PAST 2 & G TO MAX. (FULL CW) ^[+10V] ^{← ALL OTHERS MIN}
2. CONNECT DVM BETWEEN JUMPER WIRE (-) & BLUE POT O (FILTER OFFSET) ^{← WIPER}
JUMPER BLACK (FILTER DRIVE) TO GND. (SHORTED)
3. ADJUST OFFSET TO +.003 VOLTS (2 or 3 mV.) — REMOVE JUMPER & DVM
4. LOOK AT LOW PASS (PURPLE) w/SCOPE — TUNE FILTER EXP. AMP. (CHECK FOR SCREAM)
 - A. HIT UPPER C KEY AND ADJUST BLUE POT G FOR MAX AMPLITUDE
 - B. HIT LOW F KEY AND ADJUST BLUE POT D FOR MAX AMPLITUDE
 - C. REPEAT A. & B. UNTIL HIGH TO LOW AMPLITUDE IS CONSTANT

CHECK FOR UNEVEN GAIN (DIP IN MIDDLE OR ENDS) OF KEYBOARD RANGE.

NOTE: BLUE TRIMPOTS D. & G. INTERACT & ROTATION IS OPPOSITE.
5. SWITCH ROOT OFF & SET FILTER MOD. OSC. CONTROL TO MAX (FULL CW) w/ MOD OSC @ 7 SPEED
 - A. ADJUST BLUE POT N ($\frac{1}{2}$ FILTER AC NULL) FOR MINIMUM AMPLITUDE w/ UPPER C
 - B. LOOK AT HIGH PASS (BROWN) AND ADJUST BLUE POT M ($\frac{1}{2}$ FILTER AC NULL) FOR MINIMUM LEVEL (SCOPE @ 50mV/div.)
 - C. REPEAT A. & B UNTIL BEST MINIMAL LEVEL OVER KB RANGE AT HI & LO Q IS OBTAINED.
6. SET FILTER CONTROLS OFF AND LOOK AT OUTPUT JACK w/SCOPE
 - A. PULSE A KEY AND SET BLUE POT T (THUMP NULL) FOR MINIMUM SPIKE
 - B. SWITCH ROOT IN & VCA SUSTAIN MAX. (FULL CW) — SHOULD HAVE STEADY SINE.
 - C. SWITCH RING MOD. IN AND ADJUST BLUE POT R FOR EQUAL AMPLITUDE
 - D. CHECK VCA FOR PROPER ATTACK & DECAY & w/ SUSTAIN.

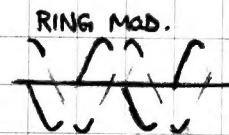

POSITION IS BETWEEN BOTH BROKEN LINE POINTS OF BLUE POT